


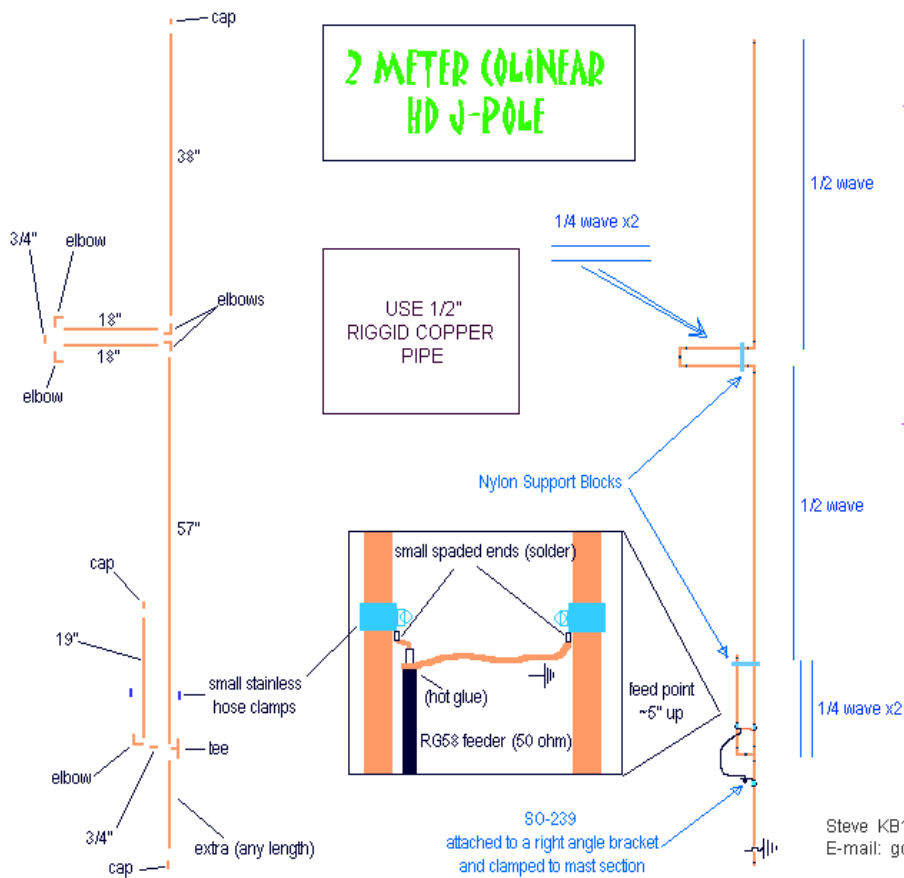

**K
B
1
D
I
G**

USE STANDARD
SOLDERING
TECHNIQUES
FOR COPPER
TUBING

NYLON
SUPPORT
BLOCKS ARE
FROM AN
OLD KITCHEN
CUTTING
BOARD
(DONT TELL
MY WIFE)

DIAGRAM
IS NOT TO
SCALE

ADJUST FOR
BEST SWR

Place a
1/2"
wood
dowl
inside
the mast
and
lower
section
for added
support

Steve KB1DIG
E-mail: govener@nh.ultranet.com